

BAT. = To battery

ACC. = To accessories

IGN. = To ignition

ST. = To starter solenoid switch